

## USING THE PIN PAD

To initiate the transaction, the customer can swipe, tap for contactless or insert their smart card themselves. Alternatively, you can initiate the transaction from the FD Terminal and the RP10 PIN Pad and terminal will prompt when the customer should present their card.

### CONTACTLESS TRANSACTIONS

Only contactless-equipped cards/devices, which are typically marked with this icon can make contactless transactions with the RP10 PIN Pad. The cardholder will tap his or her contactless card/device against the top of the RP10 screen.

### FOR MAGNETIC STRIPE TRANSACTIONS

Find the card reader slot on the right side of the RP10. Slide the magnetic card from the top of the device to the bottom with the face of the card facing outward (right).

### FOR SMART CARD TRANSACTIONS

Find the card reader slot at the front of the RP10 and insert the card completely with the front of the card facing up.

## USING THE KEYPAD

Through the keypad, the user can select transaction types and enter information. The FD150 has 15 keys that can be used to select numbers, letters and to enter data. To enter numbers or letters, simply press the appropriate key. For example, to type the letter A, press [ALPHA]; then the number 2 key. For the second letter on the keyboard, such as B, press [ALPHA] twice then [2]. Or for C press [ALPHA] three times then [2].



### USING THE TOUCHSCREEN

In addition to the keypad, the FD150 also includes an easy to use touchscreen with a simplified menu. Many functions can be selected using the touchscreen for added convenience.

## FD150 TERMINAL & RP10



CLARKBRANDS.COM | 877-GO-CLARK